




PLUG-IN CABLES

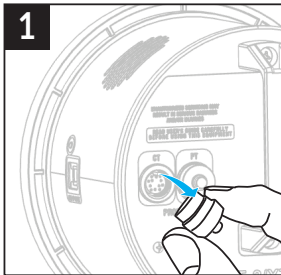


Remove the protective caps

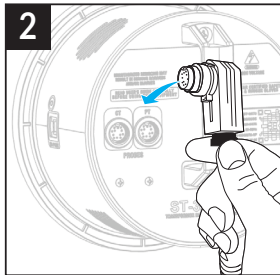


Connect the R/A plug-in into the ST-3/XT3 port

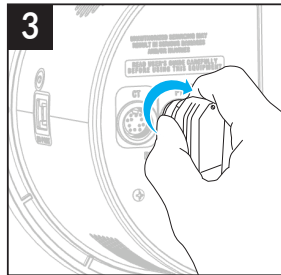


Screw firmly to secure

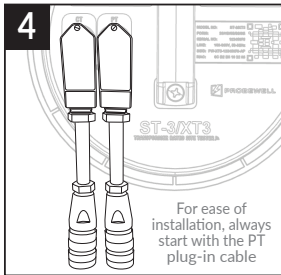

Repeat steps 1-3 for the second plug-in

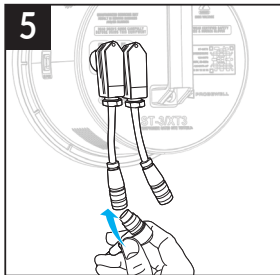

Connect the accessories to the other end

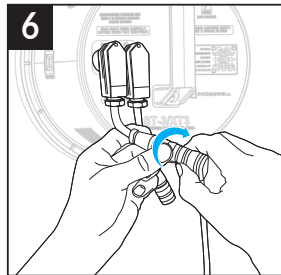

Screw firmly to secure